



Parrot Bebop Drone Battery Replacement

This guide will teach you how to properly remove and replace the battery on the Parrot Bebop Drone.

Written By: Nazar Savchuk



INTRODUCTION

Before replacing most other part on this device, the battery must be properly disconnected in order to continue on. This guide will teach you how to remove and replace the battery.

Step 1 — Battery



- Begin by removing the velcro strap around the battery.

Step 2



- While holding onto the nose, gently pull the battery away from the nose.

Step 3



- Once the battery is separated from the nose, push down on the connector and pull the battery away from the connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 10:16:50 AM.